


Quick Installation Guide

PENTAGRAM Freezone HP-Silent HDD (P 7210)




Components

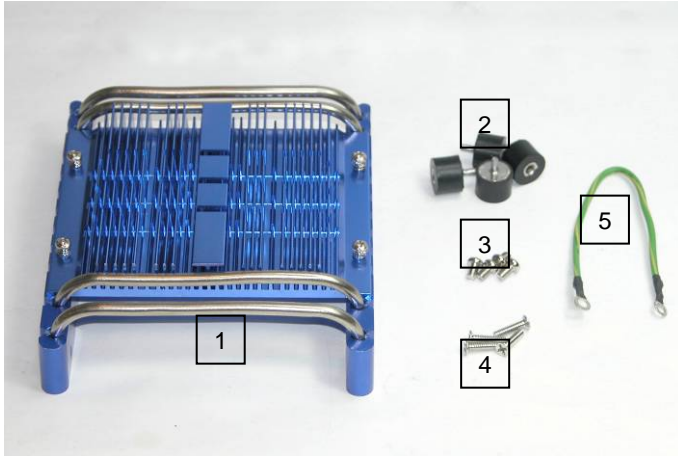

1. HP-Silent HDD
1 szt.
2. Rubber Damper
4 szt.
3. Screw
4 szt.
4. Sunk Screw
4 szt.
5. Ground Wire
1 szt.


1. As shown in the diagram, place the HDD inside the cooler (1), position the correct mounting holes, and fasten the HDD onto the cooler tightly by using 4 Sunk Screws (4). The top of the HDD should face the heatpipes.

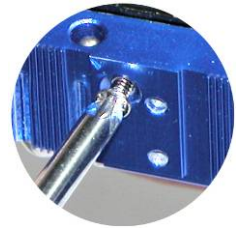

2. Screw the 3 Dampers (2) onto the cooler. As shown in the diagram, for the mounting hole remains unscrewed, it is on the right hand of the cooler while near to the connecting side of the HDD.



3. Insert the bolt of the Damper into the ring of the Ground Wire (5), and screw the last Damper onto the cooler tightly.

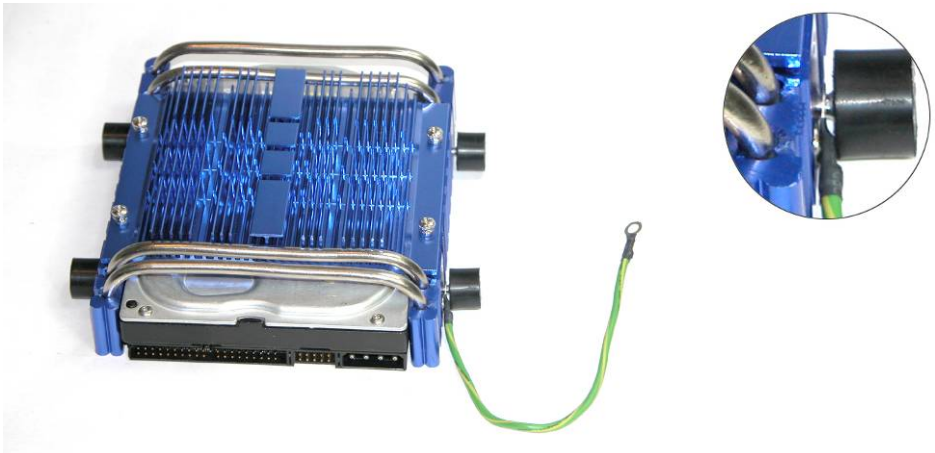

4. Insert the HDD and cooler assembly into the 5.25" drive bay, and fix it by fastening the 4 Screws (3) onto the Dampers tightly. As shown in the diagram, for the Damper with Ground Wire, insert the Screw into the ring of the Ground Wire first before fasten it onto Damper.



5. Finish the installation by connecting the cables properly.

